


## MOUNTING KIT



Each CopBox model is designed with a vehicle specific QuickLink mounting plate attached to the base. CTech includes all the hardware needed for a complete installation of the the CopBox utilizing factory mount locations with minimal to no modifications needed to original equipment.

*Kit includes: 1-Z Rail, 2- 1/4-20 x 3/4" bolts and washers, 2-5/16" allen bolts and washers, 2-body nuts, 2-rear mount brackets, and 2-CTech easy turn knobs*

## SPARE TIRE ACCESS

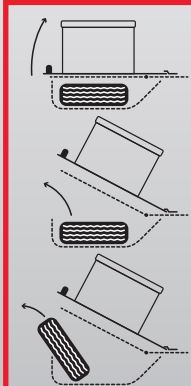

1. Remove CTech knob screws and raise rear of CopBox. Secure it in the upward position with supplied hooks and strap. Strap one end to the CopBox handle located on the base and the other end to the weather strip channel at the top of the hatch opening. (see photos)

2. Remove factory floor and remove tire.

3. Reverse steps for installation.



**WE BUILD IT BETTER**



7501 Commerce Dr  
Weston, WI 54476

715.355.8842

**CopBox** ONLY FROM CTech  
**CABINETS** TACTICAL STORAGE

FORD INTERCEPTOR UTILITY  
(2020+)

## **COPBOX INSTALLATION GUIDE**



**TACTICAL**

## INTERCEPTOR INSTALLATION STEPS:

1. Remove the factory fasteners towards the front of the cargo bay and install front Z-Rail mount with provided 5/16" allen head bolts and washers.



2. Remove factory cargo sill trim and notch holes into the recessed area for the rear mount bracket to extrude through.



3. Slip body nut into the rear slot and install the rear mounts in the rear sill of the vehicle. Use provided 1/4-20 x 3/4" bolts and washers.



4. Reinstall the rear sill plate and set the CopBox into the rear of the vehicle.



5. Slide the CopBox so the Quick Link mounting plate securely inserts under the front Z-Rail and set into place. Then install the CTech easy turn knobs to secure your CopBox into place.



6. Congratulations on your premium storage solution, enjoy the security and safety of the CTech CopBox Cabinet!

